

By scanning the “Print label” QR Code, you can quickly and easily print a new or additional label for your edgeband coils or boards - without any manual intermediate steps.

## Print label




### How it works:

1. Scan the “Print label” QR code (left).



2. Then scan the existing label on the corresponding edgeband coil or board.

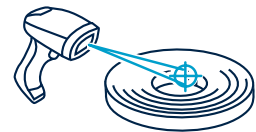

### RESULT:

The label is printed!



By scanning the “Delete” QR code, you can quickly and easily delete an edgeband or board from your material stock in the app – without any manual intermediate steps.

## Delete




### How it works:

1. Scan the “Delete” QR code (left).




2. Then scan the existing label on the corresponding edgeband coil or board that is to be deleted.

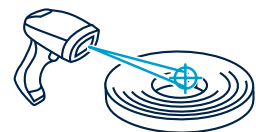

### RESULT:

The corresponding edgeband coil or board is deleted!

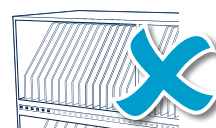

By scanning the “Confirm storage location” QR code, you can quickly and easily confirm the previous storage location of an edgeband coil or board.

## Confirm storage location



### How it works:

1. Scan the existing label on the edgeband coil or board.



2. Then scan the “Confirm storage location” QR code (left).



### RESULT:

The previous storage location is confirmed!



By scanning the “Confirm storage location” QR code, you can quickly and easily confirm the current storage location of an edgeband coil or board and print a label directly.

## Confirm storage location & print label

 


### How it works:

1. Scan the existing label on the edgeband coil or the board.



2. Then scan the QR code “Confirm storage location & print label” (left).



### RESULT:

The current storage location is confirmed and the label is printed!

